

Always use safety stands when installing or removing heavy components.

## Portable Maintenance Jack Stands

**RS20YL / Screw-Type Adjustable** 56.1"-82.3" / 20,000 lbs. Capacity

**RS20WYL / Welded Version of RS20YL** 

**RS2052SYL / Screw-Type Adjustable** 34.3 "-55.5" / 20,000 lbs. Capacity

**RS36SYL / Screw-Type Adjustable** 55.31"-82.28" / 36,000 lbs. Capacity

All jack stands meet the required ASME PASE-2014 safety requirements for portable service equipment.